
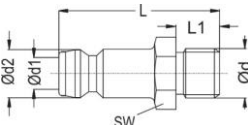
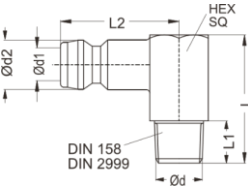


Rychlospojky TST - série 059, 060, 090, 190

Vsuvka s trnem na hadici PUSH-ON 	index (s ventilem)	index (bez ventilu)	série	d1 [mm]	d [mm]	d2 [mm]	L [mm]	L1 [mm]
	-	FW-060-FU10	060	6	9	10	44	24
	-	FW-060-FU13		6	9	12,7	45	28
	-	FW-090-FU10	090	9	13,5	10	43	24
	-	FW-090-FU13		9	13,5	12,7	47	28
	-	FW-190-FU13	190	13	19	13	60	28
	-	FW-190-FU19		13	19	19	70	38

Vsuvka s vnějším závitem 	index (s ventilem)	index (bez ventilu)	série	rozměr závitu	d1 [mm]	d2 [mm]	SW [mm]	L [mm]	L1 [mm]
	FW-059-EUBM5	FW-059-EUM5	059	M5x0,5	2,7	5	9 / 7	28 / 18	5
	FW-059-EUBM8	FW-059-EUM8		M8x0,75	2,7	5	9 / 11	30 / 21	7 / 8
	-	FW-060-EUM8	060	M8x0,75	4,5	9	11	24	7
	-	FW-060-EUM10		M10x1	6	9	11	24	7
	-	FW-060-EUM10-1,5		M10x1,5	6	9	11	25	8
	-	FW-060-EU10		1/8" BSP	6	9	11	24	7
	FW-060-EUB13	FW-060-EU13		1/4" BSP	6	9	14	28 / 26	11 / 9
	FW-060-EUBM14	FW-060-EUM14		M14x1,5	6	9	14	28 / 26	11 / 9
	FW-060-EUB17	FW-060-EU17	3/8" BSP	6	9	17	28 / 26	11 / 9	
	-	FW-090-EU10	090	1/8" BSP	9	13,5	14	26	7
	-	FW-090-EUM10		M10x1	9	13,5	14	26	7
	-	FW-090-EUM10-1,5		M10x1,5	9	13,5	14	28	9
	-	FW-090-EUM12		M12x1,5	9	13,5	14	30	9
	FW-090-EUB13	FW-090-EU13		1/4" BSP	9	13,5	14	30 / 28	12 / 9
	FW-090-EUBM14	FW-090-EUM14		M14x1,5	9	13,5	14	30 / 29	12 / 9
	FW-090-EUBM16	FW-090-EUM16		M16x1,5	9	13,5	17	30 / 29	12 / 9
	FW-090-EUB17	FW-090-EU17		3/8" BSP	9	13,5	17	30 / 28	12 / 9
	FW-090-EUB21	FW-090-EU21	1/2" BSP	9	13,5	21	31	12	
	FW-190-EUB21	FW-190-EU21	190	1/2" BSP	13	19	22	51 / 47	14 / 12
FW-190-EUBM24	FW-190-EUM24	M24x1,5		13	19	27	51	14 / 16	
FW-190-EUB26	FW-190-EU26	3/4" BSP		13	19	27	51	14 / 16	

Vsuvka 90° s vnějším kuželovým závitem 	index (s ventilem)	index (bez ventilu)	série	rozměr závitu	d1 [mm]	d2 [mm]	HEX [mm]	L [mm]	L1 [mm]	L2 [mm]
	-	FW-059-EUM5-90	059	M5x0,5	2,7	5	10	15,5	5	14,5
	-	FW-059-EUM8-90		M8x0,75	2,7	5	10	17,5	7	14,5
	-	FW-060-EUM8-90	060	M8x0,75	6	9	11	27	9	23
	-	FW-060-EUM10-90		M10x1	6	9	11	27	9	23
	-	FW-060-RU10-90		1/8" BSPT	6	9	11	27	9	23
	-	FW-060-RU13-90		1/4" BSPT	6	9	15	34	12	27,5
	-	FW-060-EUM14-90		M14x1,5	6	9	15	34	12	27,5
	-	FW-060-RU17-90		3/8" BSPT	6	9	17	34	12	23
	-	FW-090-RU13-90	090	1/4" BSPT	9	13,5	15	34	11	24,5
	-	FW-090-EUM14-90		M14x1,5	9	13,5	15	34	12	25,5
	-	FW-090-RU17-90		3/8" BSPT	9	13,5	17	34	12	27
	-	FW-190-RU21-90	190	1/2" BSPT	13	19	25	47	15	42
-	FW-190-EUM24-90	M24x1,5		13	19	24	47	16	42	